

# FIFR PORTABLE STEAM SAUNA



## SPECIFICATIONS

### Carton Size (L x W x H)

88cm x 28cm x 33cm

### Material

Cotton Cover and Frame

### Rated Voltage of Steamer

220V

### Power of Steamer

1000W

## ACCESSORIES




Sauna Tent



Steamer




Remote

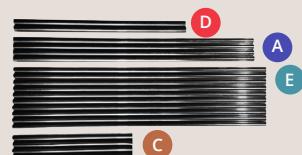

Support Rods

D 2pcs   A 4pcs  
E 10pcs   C 4pcs

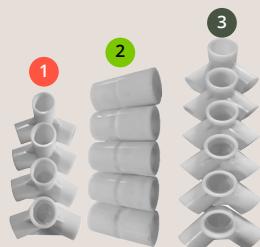

Straight Tube + Tee

- 1 4pcs Obtuse angle tee
- 2 5pcs Straight tube
- 3 6pcs Right angle tee




Chair



Pill box


# SAUNA INSTRUCTIONS

Arrange the bracket accessories according to the number and assemble and fix them.

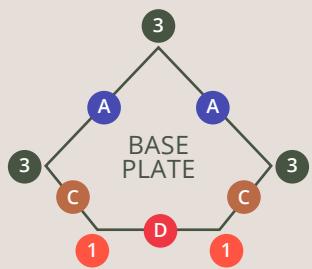


STEP  
01

Assemble the top as described in Step 1.

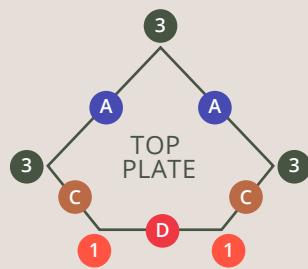


STEP  
02

Connect two long support rods **E** (teal) through a straight tube **2** (green) that should make 5 pairs of long support rod are continuously assembled.

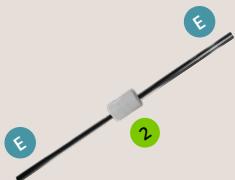


STEP  
05

Insert the 5 vertical rods assembled in step 3 into the five three-way holes on the bottom plate assembled in step 1.

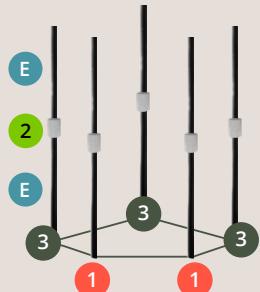

STEP  
04

Flip the top plate, assembled in step 2, over the top of the 5 vertical support rods, assembled in step 3, and insert the tee.

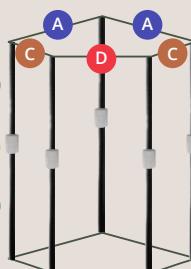

STEP  
05

With the outer account (grey cloth), find the bottom and according to the orientation of the five corners, put it under the base plate of the support.



STEP  
06

Slip the other end of the outer account over the top plate.



STEP  
07

Pull the zip as shown in Step 7. It will be an installed sauna.



STEP  
08

Connect the cartridge and hose to the interface of the steam engine cover. The pill box must be placed as shown, can't be upside down.



STEP  
09



## SAUNA PRECAUTIONS

1. Keep the body clean and hygienic before entering the sauna. Enter the experience after bathing and removing make up.
2. It should not be used by pregnant women, infants and those with serious diseases and infectious diseases.
3. It should not be used by patients with heart disease high blood pressure, or bypass, stent, plate, or steel pin in the body.
4. It is strictly prohibited to bring mobile phones, watches and precision instruments into the sweat box because the temperature and humidity environment will affect it.
5. Do not use after drinking alcohol.

### CAUTION

Do not leave the Portable Steam Sauna unattended or turned on when not in use. The steamer will dry out, become permanently damaged and stop working.

When you are using the product, please make sure all of the steam tubes are not bent, since it would block the flow of steam.

As a result, it may make the steam tubes pop off and hot steam stray out, causing scalding and other bodily injuries. Make sure the steam tubes are placed straight. If they are bent, turn off the power and let them thoroughly cool down first before you adjust their positions.

Use one of the steam tubes to connect the steamer and the inlet hole on the outer side of the sauna tent cover as shown in the picture. Ensure that the steam tube is well connected with the two parts. If the tubes fall off or loosen during usage, please turn off the power and let them thoroughly cool down first before connection.



# STEAMER INSTRUCTIONS



## FEATURES

- 1. One piece stretch formed stainless steel liner
- 2. Anti-dry explosion proof, anti-leakage
- 3. Water shortage drip alarm
- 4. The inner liner is thick and not easy to rupture
- 5. High power heating, 9 speed adjustment

## INFORMATION

When the product is received, the cover is buckled on the machine's inner casing. Please overturn the bottom, then you can take it off with your hand on the lid.

Accessories such as kits and remote controls are generally placed in the liner, please do not twist the screws on the grid. Also do not remove the grid (the left cover is a schematic for reference only).



- 1. Indicates that the cover is tightened. The cover is twisted at the end and the white groove is completely exposed.
- 2. Please tighten the cover in the direction of the arrow.
- 3. Please do not unscrew the cover while the machine is working to prevent steam burns.
- 4. Please do not connect non-temperature resistant tubes to avoid unnecessary trouble.



*The hole in the bottom of the kit is designed because the water vapor will form condensation when it is condensed into the water, and the water will affect the steam hole.*

# STEAMER INSTRUCTIONS

Please use 9 speeds to quickly heat up, then lower the gear position.

STEP  
01

The room must be equipped with leakage protection device, use qualified power socket, load capacity is above 10A voltage 220V, 50HZ and single steam machine working maximum current 5A.

STEP  
02

The steam engine should be placed on the same plane. The power switch and the steam engine display board should avoid any water droplets or splashes. Prohibited to use in the bathroom and places with high humidity.

STEP  
03

Do not add too much water, the water level should be under the highest scale of the inner tank. Turn down the temperature when boiling surface hits the glass cover.

STEP  
04

It is strictly forbidden to add any flammable, toxic and corrosive substances to the steam engine liner.

STEP  
05

Users should adjust the steaming time and gear position according to their own needs to prevent excessive temperature and dehydration. Do not touch the air hole with your hands or feet to avoid burns.

STEP  
06

Pay close attention to the steam safety valve. If the valve is found to be dry or not releasing steam, turn off the power immediately. Check whether the air outlet is blocked. Do not open the cover if there is any blockage. Once the standby unit has cooled down completely, the cover can be safely opened.

# STEAMER PRECAUTIONS

This unified product warranty according to the national "Three Guarantees"

1. If you need to add water or change the solution, turn off the power and wait 5 minutes before opening the lid. Never open the lid or remove the steam tube while the steam is running to avoid burns.

2. The machine is tested before leaving the factory. If it develops a fault or the power cord is damaged, have it repaired by a professional using the same parts.

3. Keep the air outlet pipe straight and unblocked. If the water runs low, the machine will shut off automatically. Let it cool before restarting. For better maintenance, turn it off manually when water is nearly empty.

4. Blocking the vent hole is prone to accident. Please do not insert the tube directly into the water.

5. After use, wipe off water and keep the machine clean and free of scale. Do not rinse the steam casing directly to avoid short circuits. Prevent leaks from the cylinder.

6. The steam engine must not be used as a regular heater. Do not disassemble, repair, or modify the fumigation unit.

7. Children should be supervised to ensure they do not play with the appliance.